 



- 1) HEAVY EQUIPMENT SUPPLY DEPOT
- 2) SEARCH LIGHTS
- 3) LASER CANNON
- 4) BATTLE STATION
- 5) MAIN CANNON CONTROL POD
- 6) DOUBLE DEVASTATION CANNON
- 7) OFFICIAL G.I. JOE FLAG
- 8) GENERATOR
- 9) INFRA-RED SURVEILLANCE CAMERA
- 10) 20MM MACHINE GUN
- 11) MOTOR POOL AREA
- 12) WEAPON RACKS
- 13) MECHANIC'S LIFT
- 14) HELIPAD
- 15) RADAR DISH
- 16) COMMAND CENTER CONSOLE
- 17) REMOTE VIEWING SCREEN
- 18) STOCKADE

HEADQUARTERS COMMAND CENTER

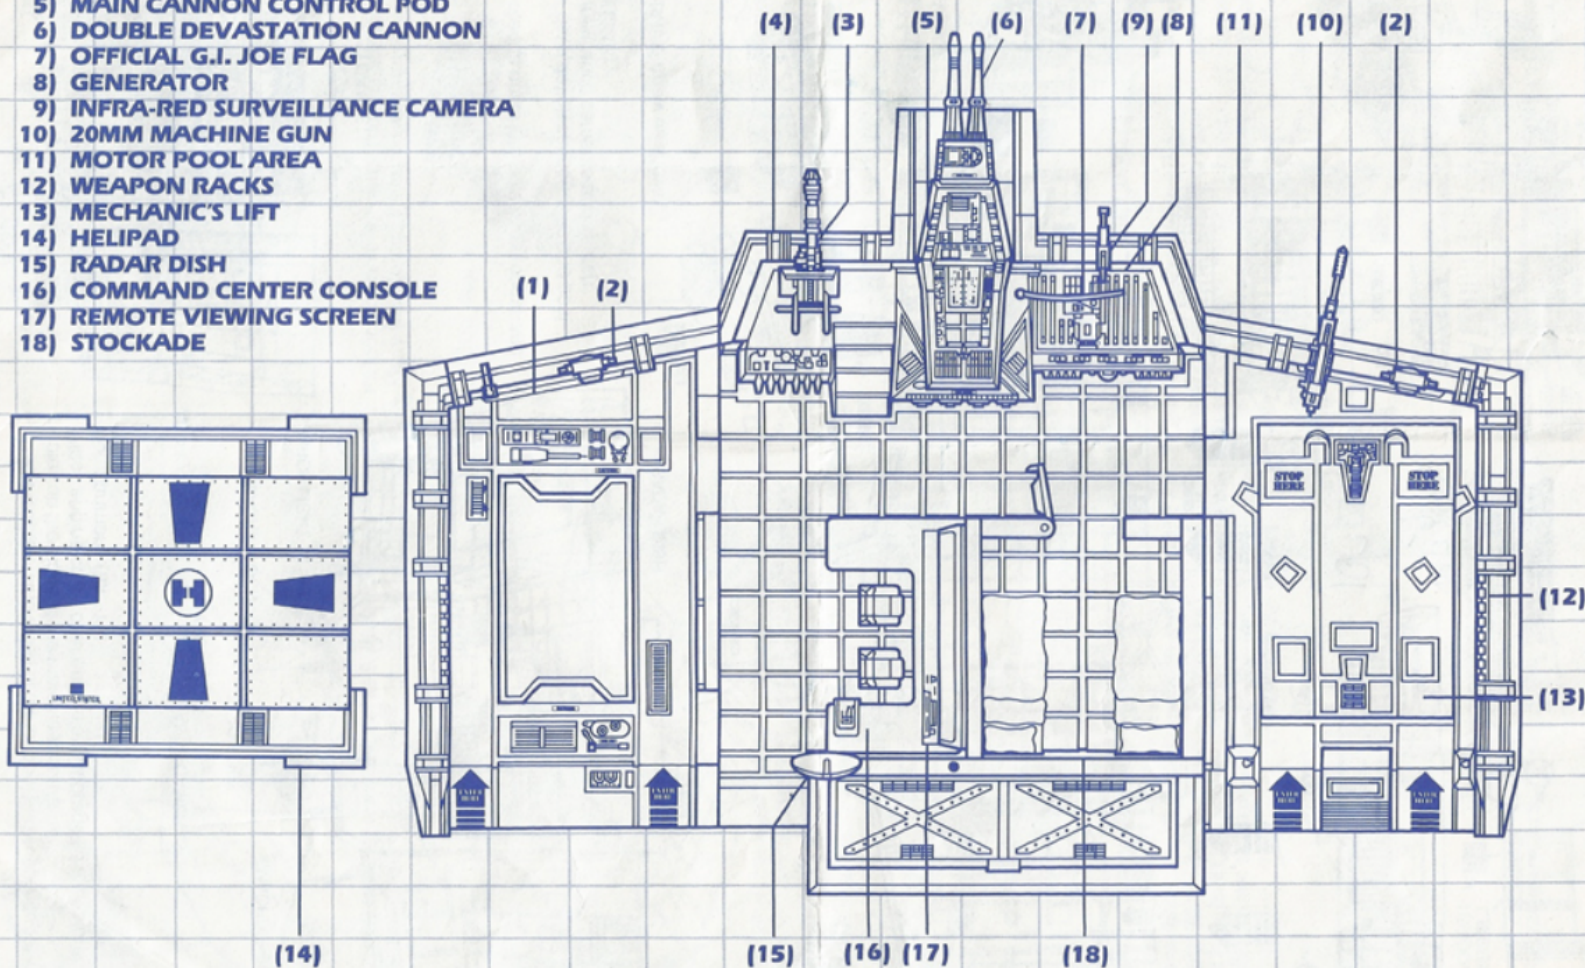


G.I. JOE® HEADQUARTERS INSTRUCTIONS

 
Carefully remove pieces from their runners before starting.
NOTE: To make assembly easier, it is important to follow the steps in proper sequence.

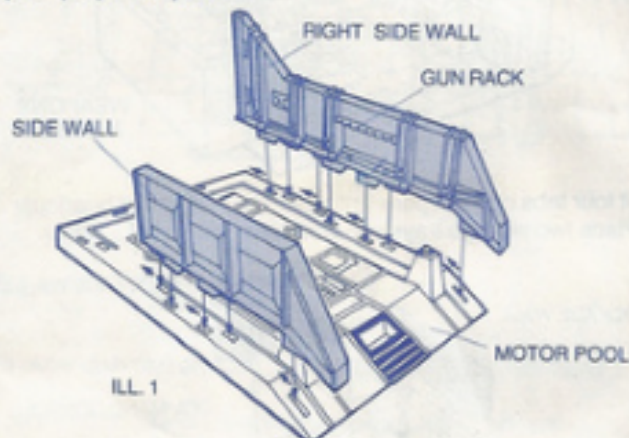


1 Fit tabs on the two side walls into the side slots on motor pool. (Gun rack on right side wall faces inward.) Slide walls forward until they snap into place. (ILL. 1)

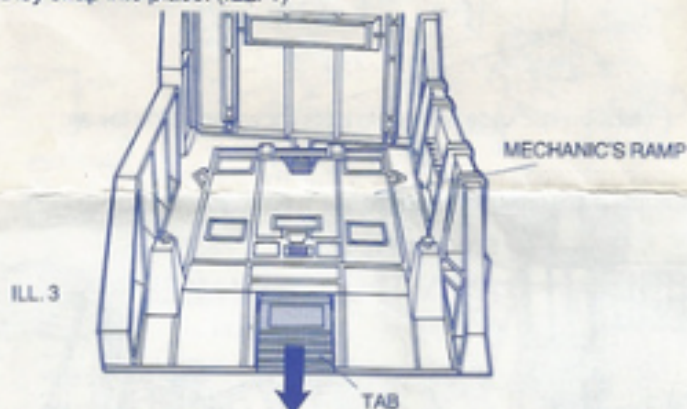

3 To lift the mechanic's ramp, pull tab out. To lower the ramp, lift the tab slightly and push back in. (ILL. 3)

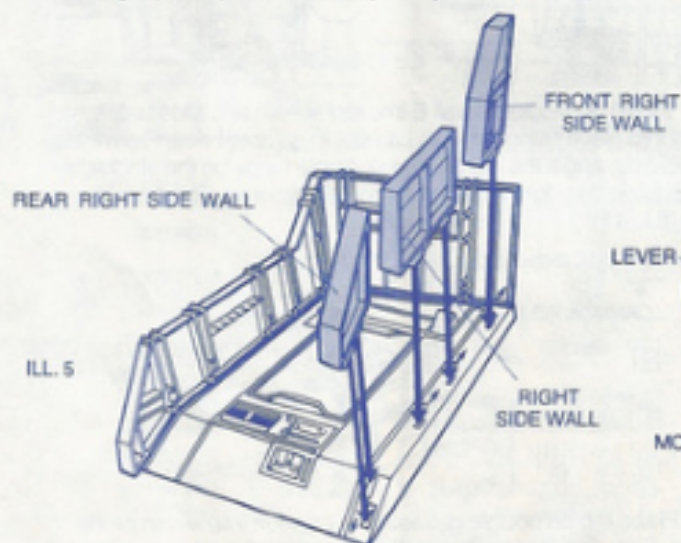


5 Fit tabs on right side walls into side slots. Slide walls forward until they snap into place. Fit tabs on rear right side wall into slots. Slide wall back until it snaps into place. (ILL. 5)

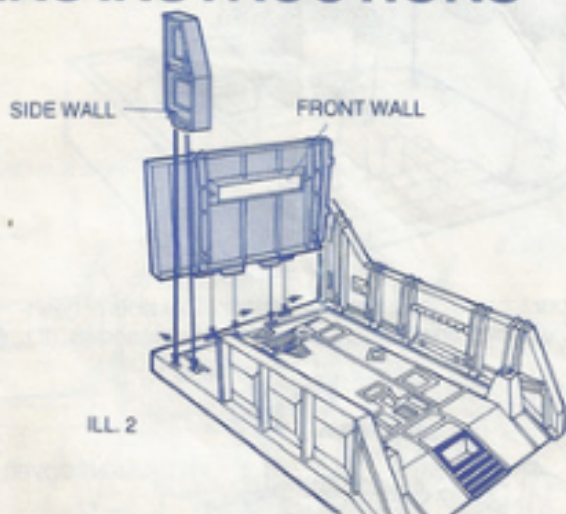


2 Fit tabs on front wall into front slots of motor pool. Slide wall right, fitting side tabs into slots in adjacent wall. Fit tabs on side wall into two remaining slots. Slide wall forward until it snaps into place. (ILL. 2)




4 Fit tabs on left side wall into side slots. Slide wall forward until it snaps into place. Fit tabs on front wall into front slots. Slide wall to the left until it snaps into place fitting side tabs into slots in left wall. Fit the two longer tabs on the file card cover into two slots in the floor. Snap cover down at the other end. You can store your file cards in this compartment. (ILL. 4)

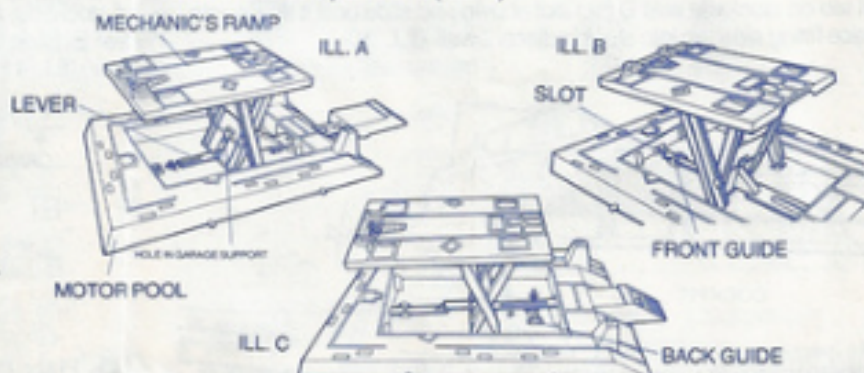


NOTE: To lift the mechanic's ramp, pull the tab out GENTLY. If you have pulled the lever out of place, then:
Feed the lever through the hole in the garage support. (ILL. A)
Continue feeding it into the front guide and into the slot. (ILL. B)
Now snap the lever down into the back guide. (ILL. C)

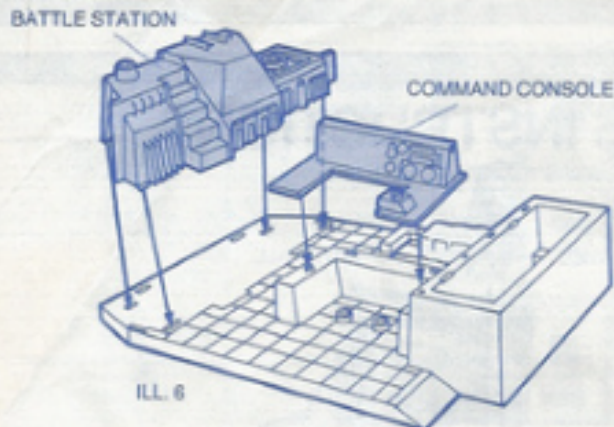


6 Snap four tabs on battle station down into front slots of headquarters. Snap posts on command console into slots shown. (ILL. 6)

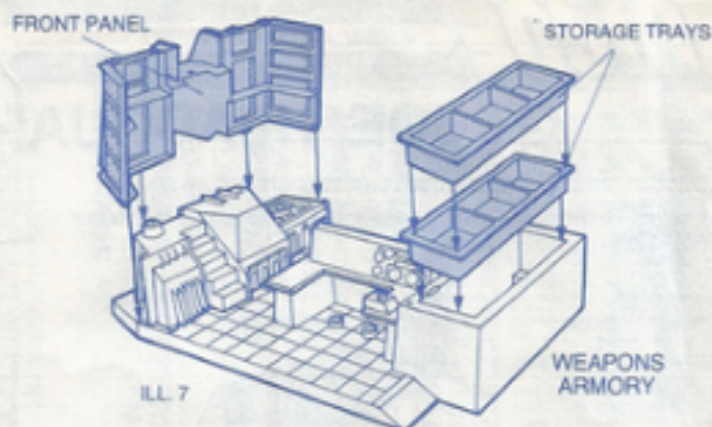


7. Fit four tabs on front panel into four slots in front of headquarters. Place two storage trays into weapons armory. (ILL. 7)

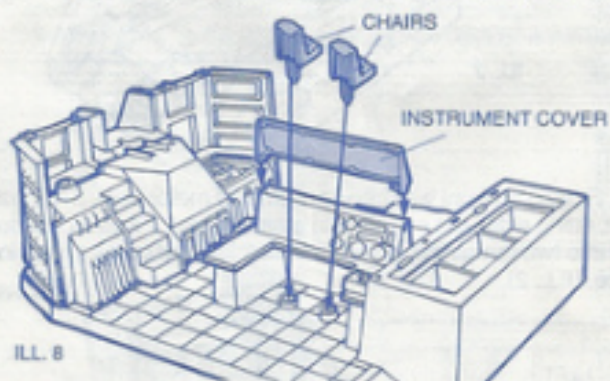


8 Snap posts on movable instrument cover into top two holes in command console. The instrument cover swings over the command console. Push posts on bottom of chairs into holes in front of console. (ILL. 8)

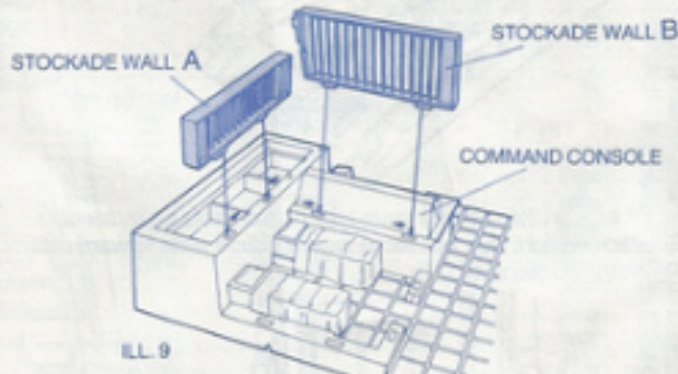


9 Fit tabs on stockade wall A into slots shown and slide toward the command console. Fit tabs on stockade wall B into slots shown and slide until it snaps into place fitting side tab into slot in adjacent wall. (ILL. 9)

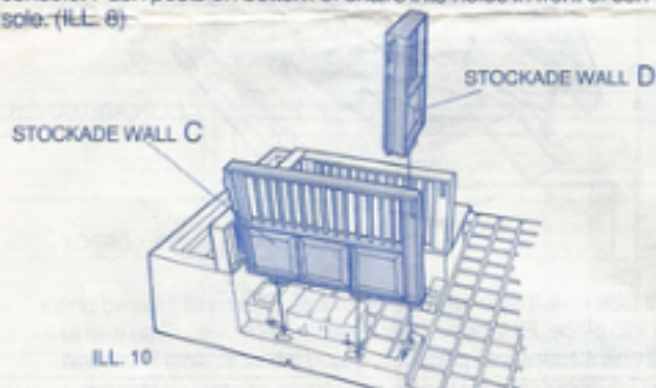


10 Fit tabs on stockade wall C into slots shown and slide until it snaps into place fitting side tab into slot in adjacent wall. Fit tab on stockade wall D into slot shown and slide until it snaps into place fitting side tab into slot in adjacent wall. (ILL. 10)

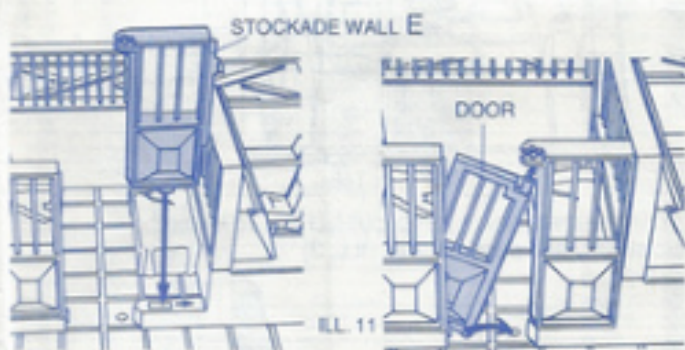

11 Fit tab on stockade wall E into slot shown and slide until it snaps into place fitting side tab into slot in adjacent wall. From inside of stockade, angle the top post on door into hinge on the stockade wall E. Slide door forward positioning its bottom peg into hole in floor. (ILL. 11)

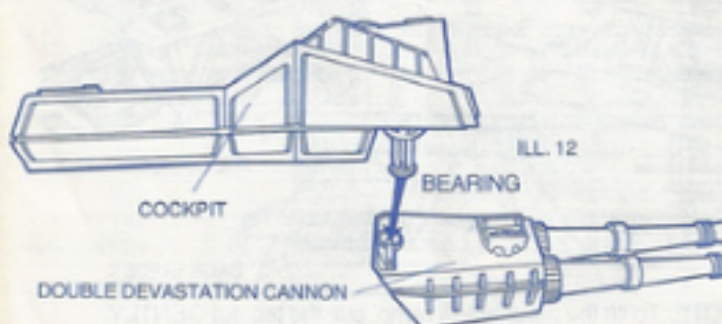


12. Line up the rib on the bearing with the slot in the hole of the double devastation cannon. Push to snap cannon and cockpit together. (ILL. 12).

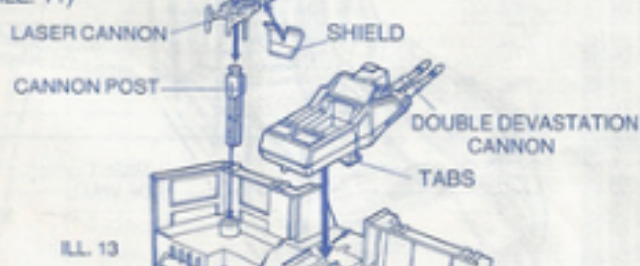

13. Place tab on double devastation cannon into slot in battle station. Slide forward and push the rear of cannon down until held securely in place. Snap top of cannon post into the hole under the laser cannon. Fit cannon post into hole in battle station. Position shield onto front of laser cannon. (ILL. 13).

IMPORTANT NOTE

When you want to lift the mechanic's ramp, pull the tab out GENTLY. If you have pulled the lever out of place, then:

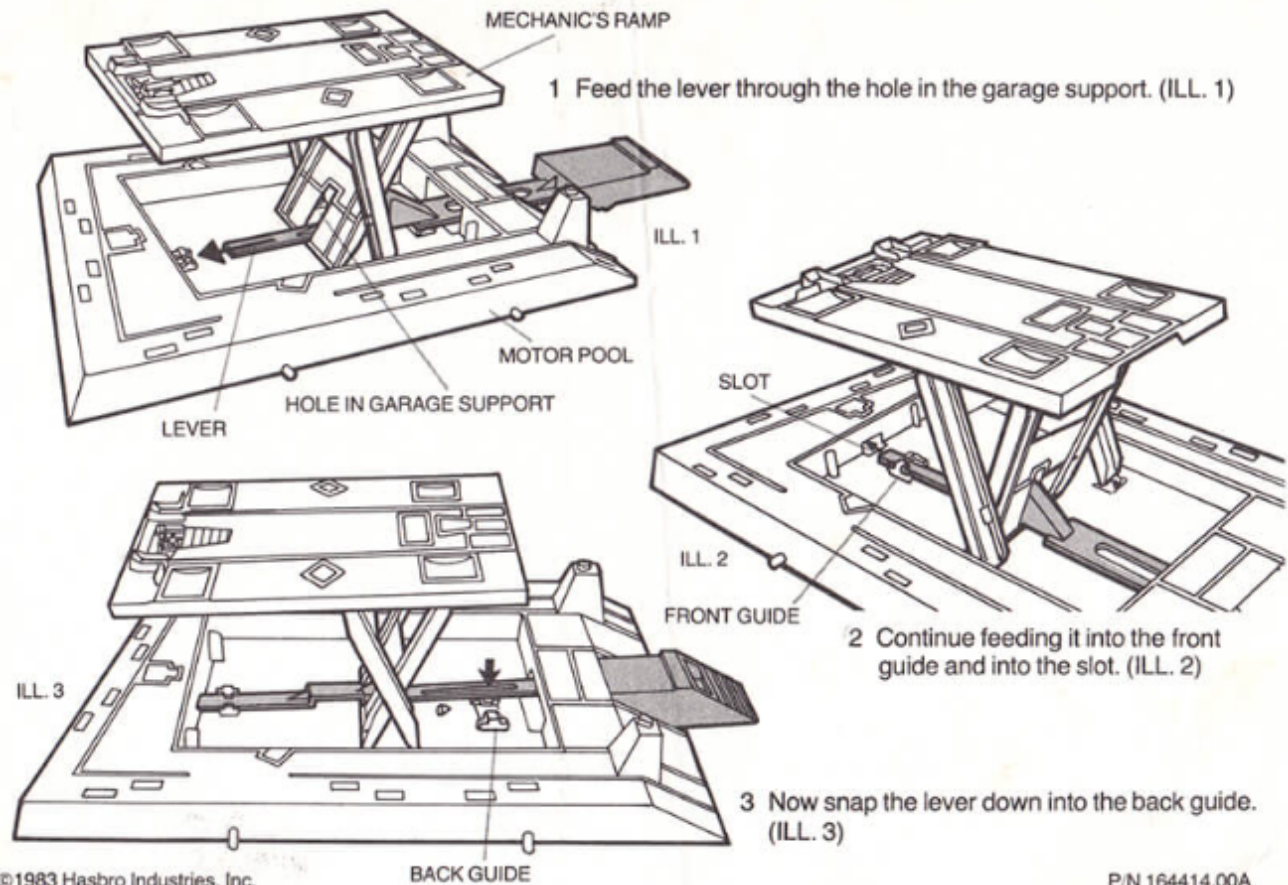

The instructions shown previously (pages 1-3) are revised instructions. Earlier instructions omitted ILL. A, ILL. B and ILL. C under step 4, which explain how to repair the mechanics ramp. This addendum insert was included with earlier instruction sheets. It conveys the same information as step 4 on the revised instructions. This insert was added to the existing supply of Headquarters instructions, and then removed once that supply was exhausted and the new instruction were in use. Scan courtesy of Chad Hucal.