
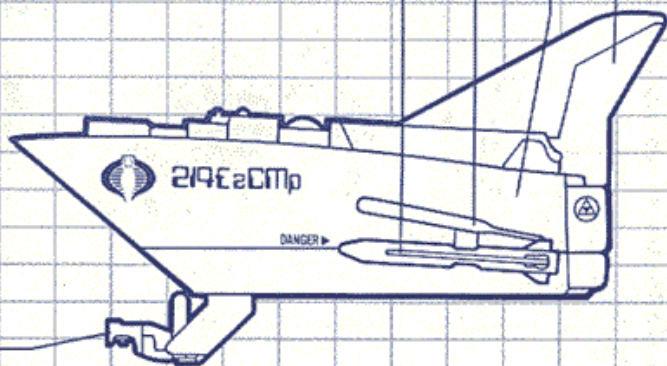
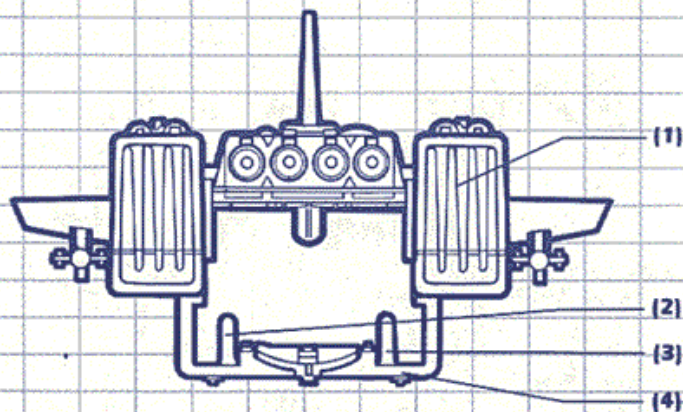



COBRA JET PACK

- 1) "SCREENER" MICROMESH ALLOY JET INTAKES
- 2) "QUICK — STICK" VELOCITY/LIFTOFF CONTROL
- 3) MICRO — ADJUST DIRECTIONAL CONTROL
- 4) LAYERED VIBRATION DAMPENING PERSONNEL RETAINER
- 5) "DOUBLE PACK" 5M/LB. THRUST TURBOFAN ENGINES
- 6) "QUAD BLAST" 25MM AXIAL FIRING MACHINE GUNS
- 7) INTERNAL BARREL SYNCHRONIZING RELAY
- 8) CONTROL SURFACE COMPUTER
- 9) "NEUTRALIZER" AIM-44 AIR-TO-AIR MISSILE
- 10) HYDRAULICALLY-ASSISTED CONTROL SURFACE WINGS
- 11) MULTI-LAMINATE HEAT-RESISTANT ENGINE SHROUD
- 12) SWEEP-BACK VERTICAL STABILIZER/RUDDER
- 13) JET EXHAUST DISCHARGE VENTILATORS

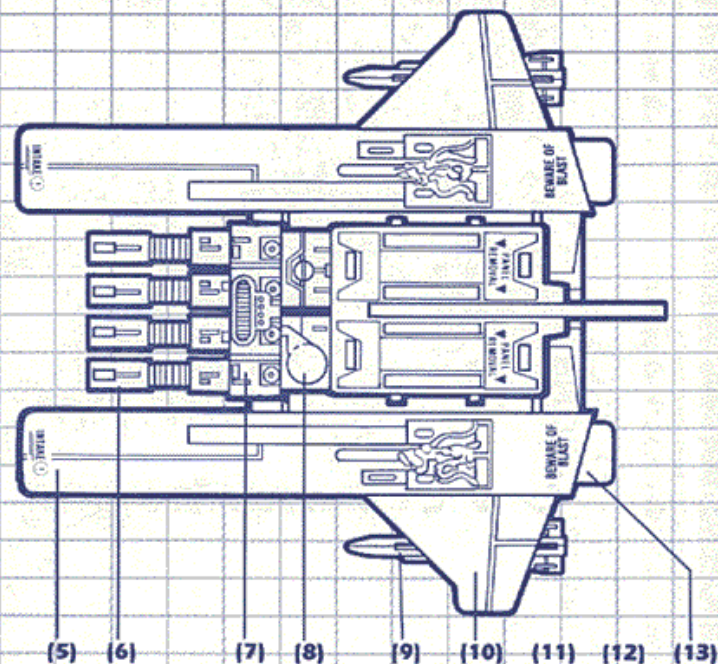


Remove all pieces from plastic frames. If you have difficulty, use safety scissors.


COBRA JET PACK INSTRUCTIONS

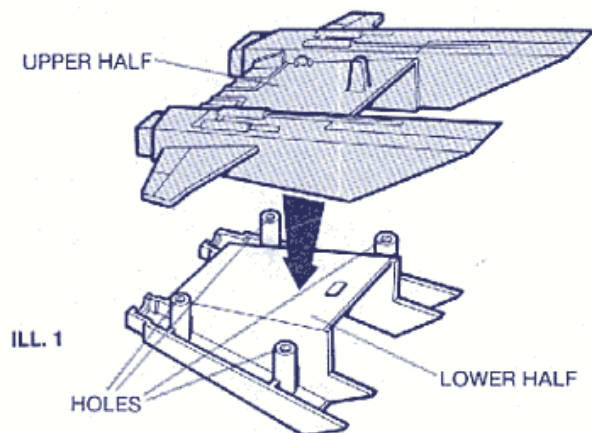


1. Line up posts on upper half of jet pack with holes in lower half. Snap together. (ILL. 1)

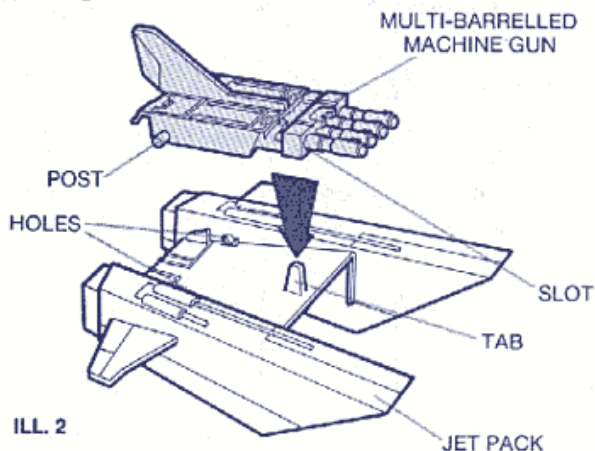



2. Insert posts on multi-barrelled machine gun into holes in jet pack. Fit tab on jet pack through slot in machine gun. (ILL. 2)

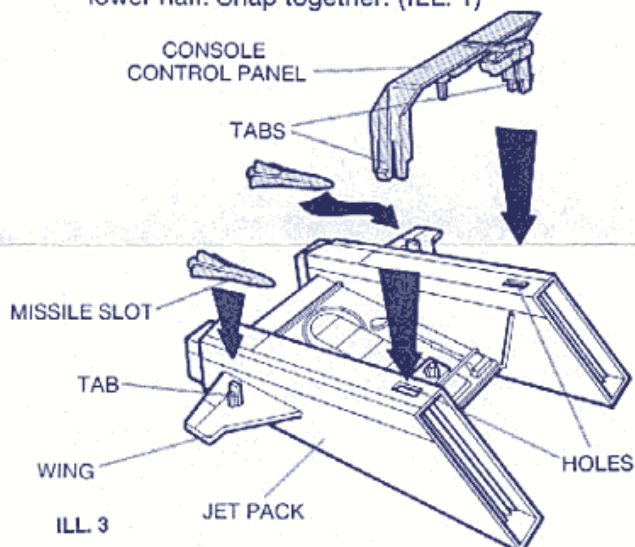

3. With console facing forward, snap tabs on console control panel into holes underneath jet pack. Fit missile slots over tabs underneath wings. (ILL. 3)

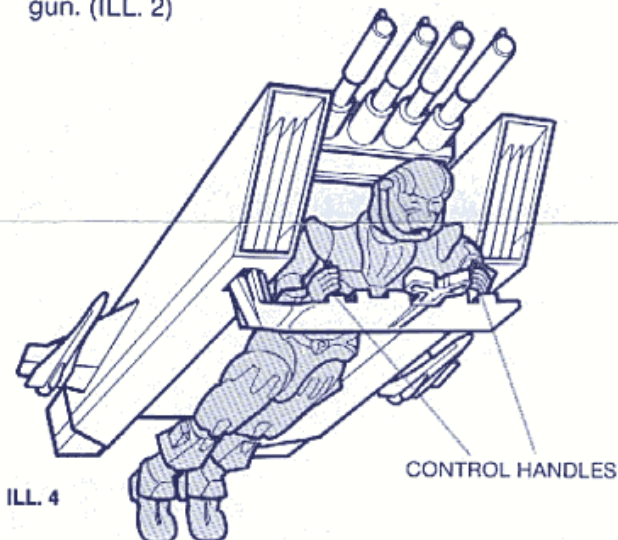

4. Fit post underneath jet pack into Cobra figure's back and place his hands on control handles. (ILL. 4)

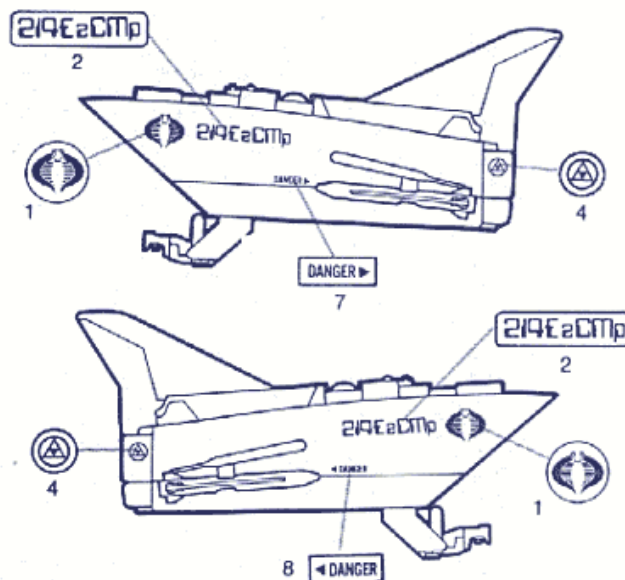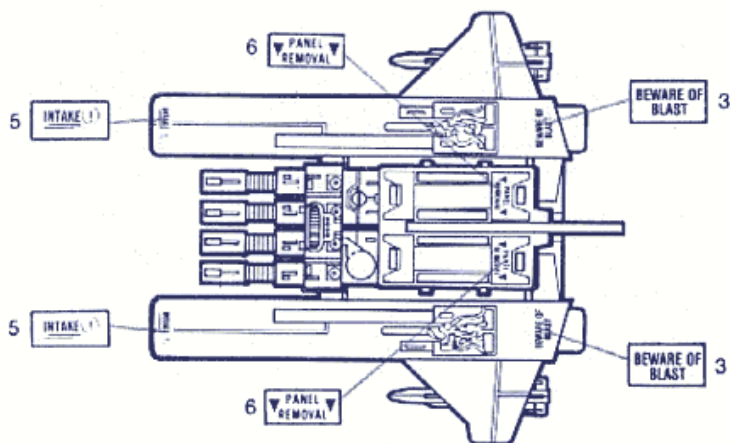

5. Peel and apply labels as shown.