G.I.JOE DOUBLE MACHINE GUN

Ground Unit

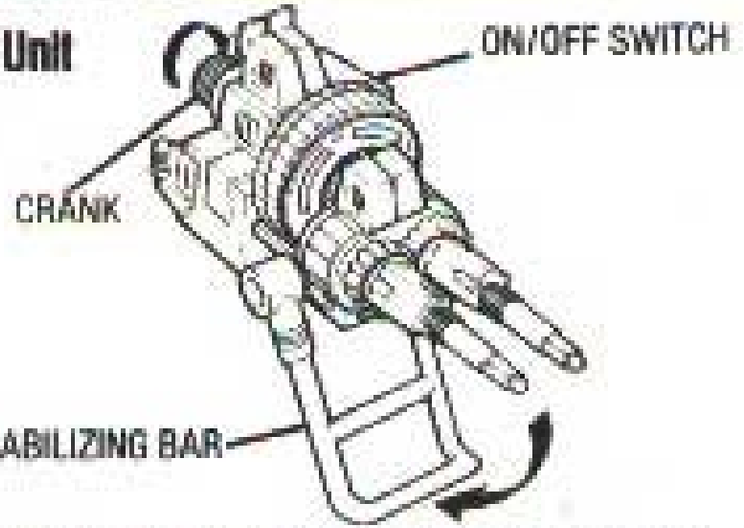

Fold down stabilizing bar. Wind crank about 5 times. (Do not overwind.) Activate ON/OFF switch.

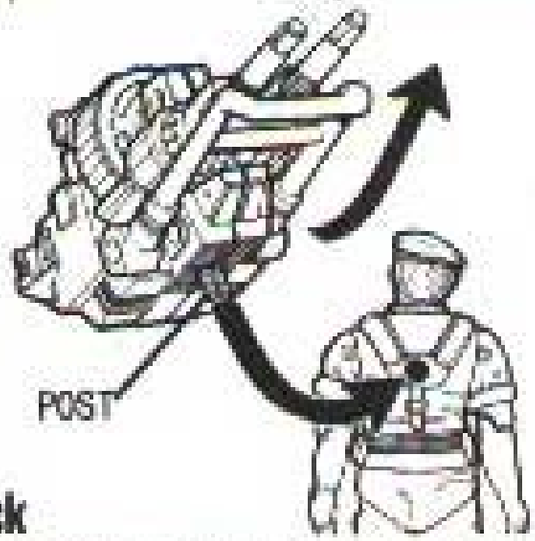

Backpack

Flip up stabilizing bar. Fit backpack post into Joe's back and bend at the waist to stand figure. (Figure sold separately.)

Peel and apply labels as shown.

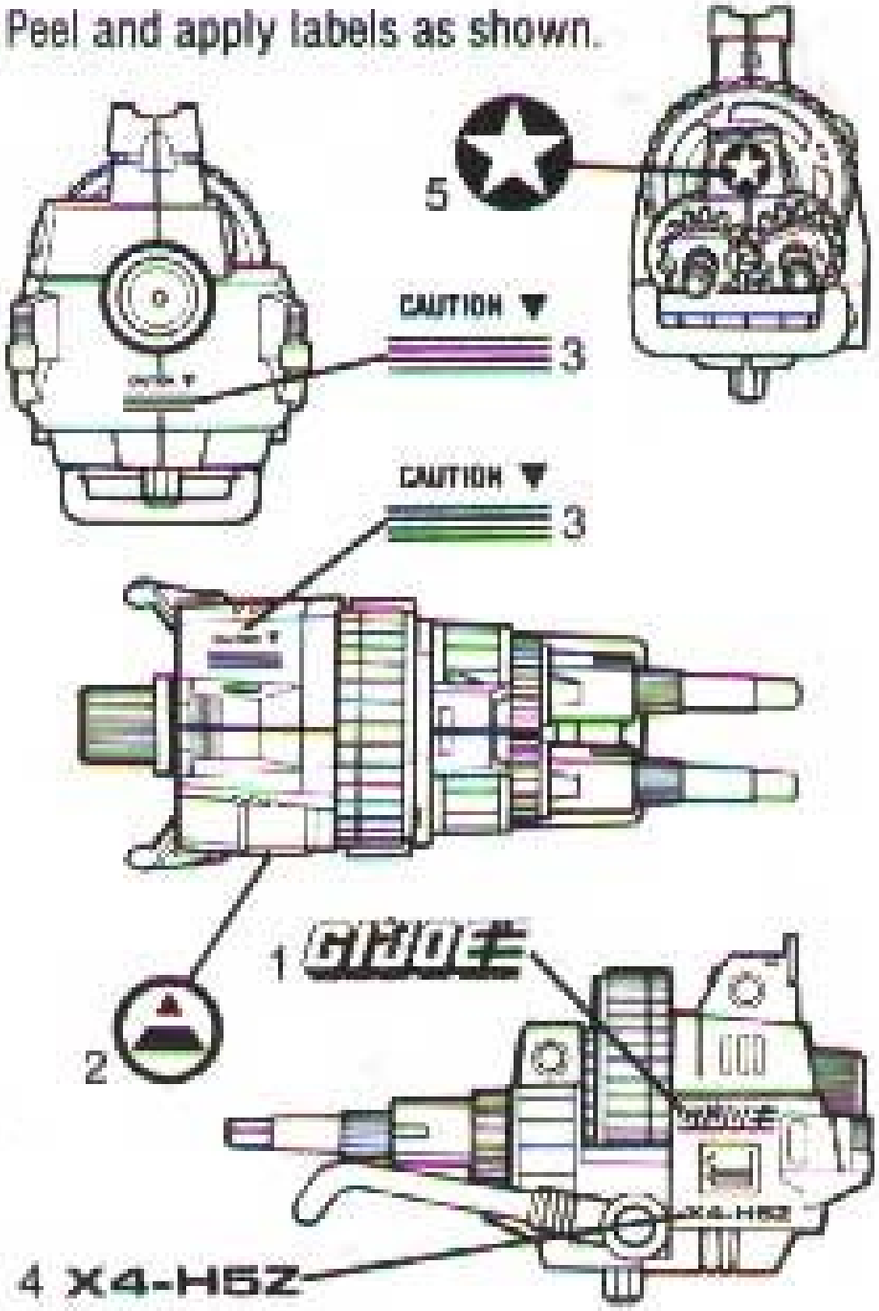

©1987 Hasbro, Inc.
Pawtucket, RI 02862 U.S.A.
All Rights Reserved. 6613/6133 Asst. PN 194248.00A