
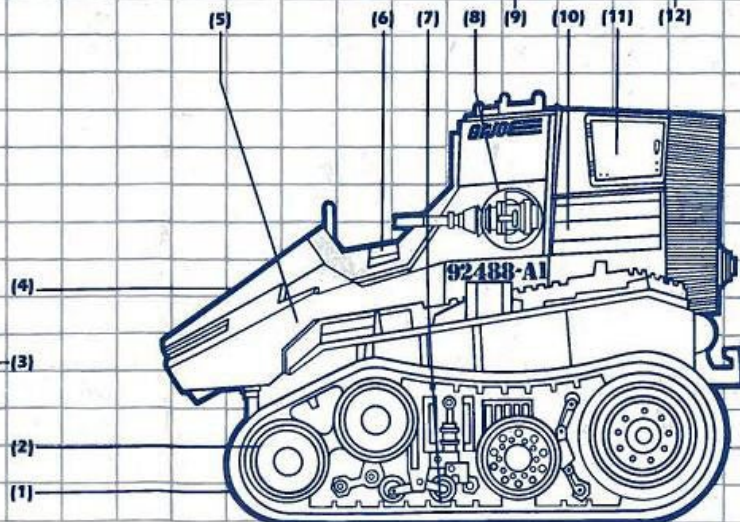
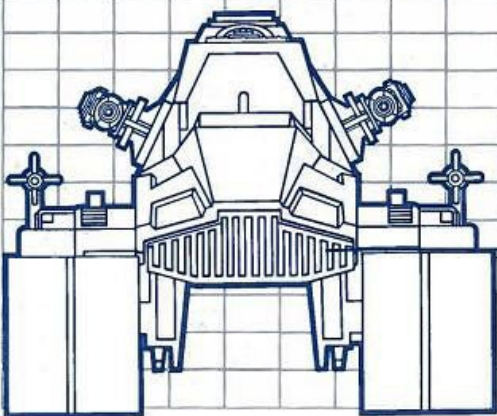



NIGHT RAIDER™

- 1) REINFORCED INTER-MESH TRACK SYSTEM
- 2) "SILENT RUNNING" NIGHT FORCE EXTRA-QUIET BOGEYS
- 3) FORWARD FACING VERTICAL FINNED ENGINE VENTILATORS
- 4) RAKED IMPACT DEFLECTING NYLON MICROMESH ARMOR
- 5) HEAVY DUTY "BLOW BY" SIDE PROTECTION ARMOR
- 6) OVERSIZED SHOCK-PROOF DRIVER COMMAND SEAT
- 7) DRIVER OPERATED TURRET MOUNTED 30MM CANNONS
- 8) ROTATING RECOILLESS CANNON STABILIZATION SYSTEM
- 9) NF-79 HEAT (HIGH EXPLOSIVE ANTI-TANK) MISSILE
- 10) TURBOCHARGED DOUBLE MUFFLER 925 HP TURBINE ENGINE
- 11) SPECIALLY-HARDENED ENGINE COVER ARMOR
- 12) BATTLE TRANSPORT PLATFORMS

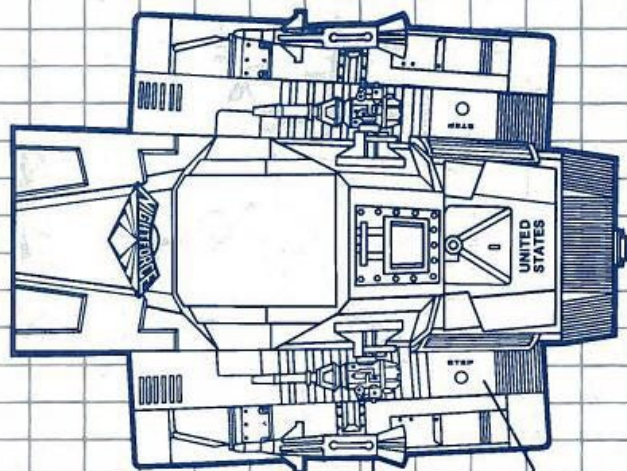


Remove all pieces from plastic frames. If you have difficulty, use safety scissors.


NIGHT RAIDER™ INSTRUCTIONS

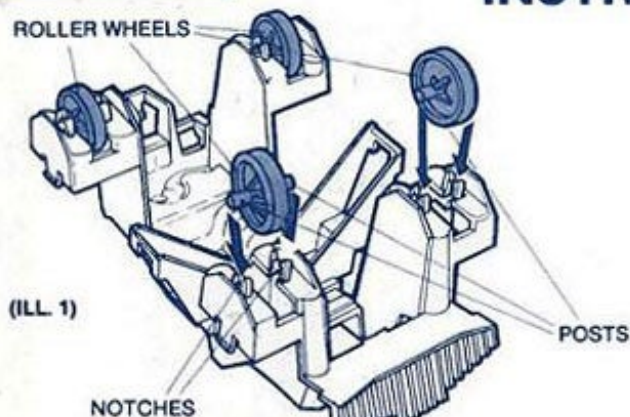


- 1 Press posts on 4 roller wheels into notches underneath chassis. (ILL. 1)

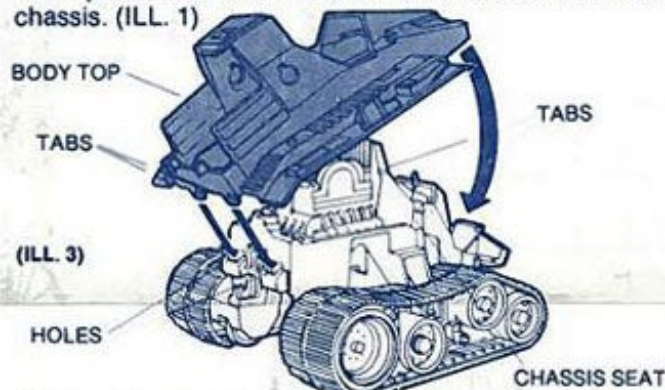


- 3 Line up tabs on rear of body top with holes in rear of chassis. Press body to snap over tabs on chassis seat. (ILL. 3)

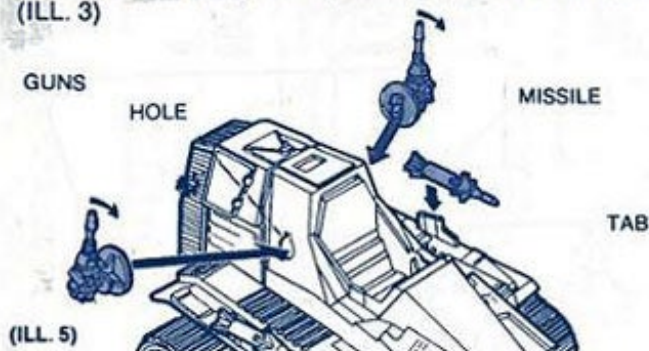


- 5 With gun barrel facing upward, snap tabs into hole on side of body and rotate barrel forward. Repeat with second gun. Fit slots in missiles over tabs on sides of body. (ILL. 5)

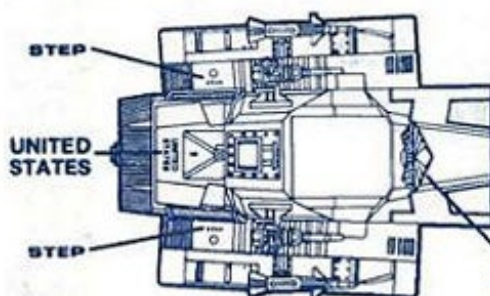


Peel and apply labels as shown.

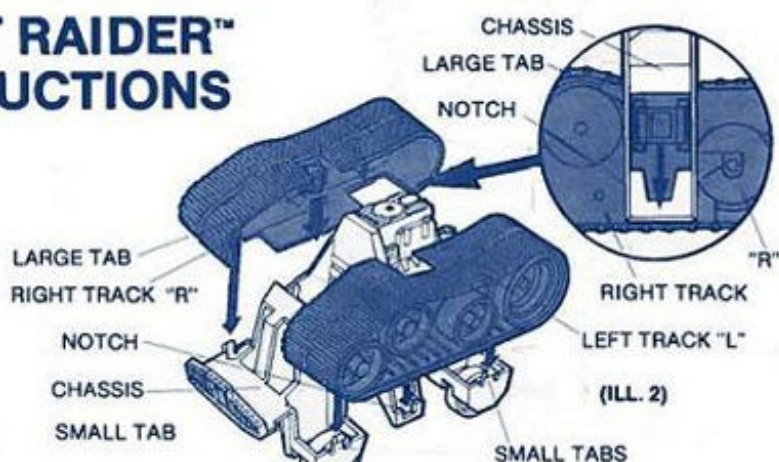

- 2 Place large tab on left track (marked "L") into notch on left side of chassis. Push inward and slide track down until small tabs snap into place. Repeat with right track (marked "R"). (ILL. 2)

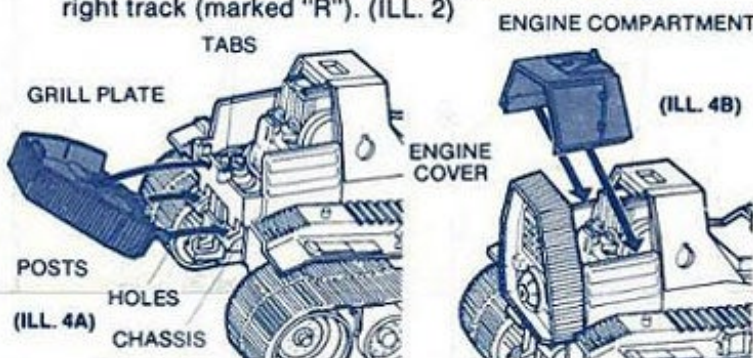


- 4 A Insert posts on grill plate into holes in rear of chassis and snap onto tabs. (ILL. 4A)
B Place engine cover over engine compartment (ILL. 4B)

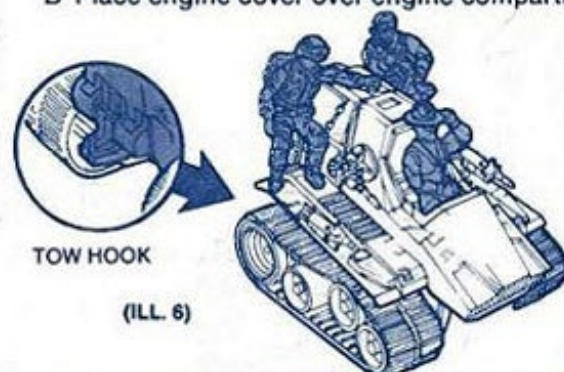

- 6 Place figure in command seat and two additional figures on footpegs. Tow other G.I. Joe vehicles with tow hook. Figures and vehicles sold separately. (ILL. 6)

92488-A1

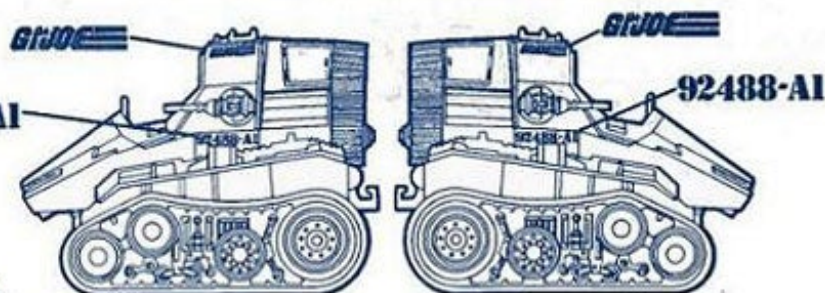

92488-A1