
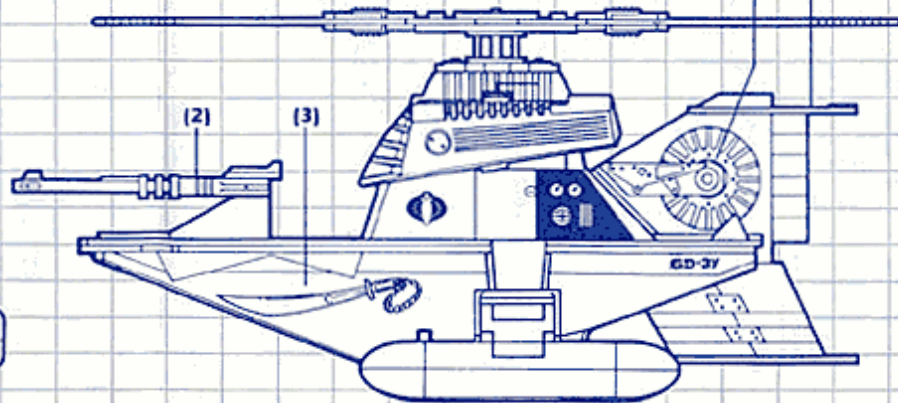
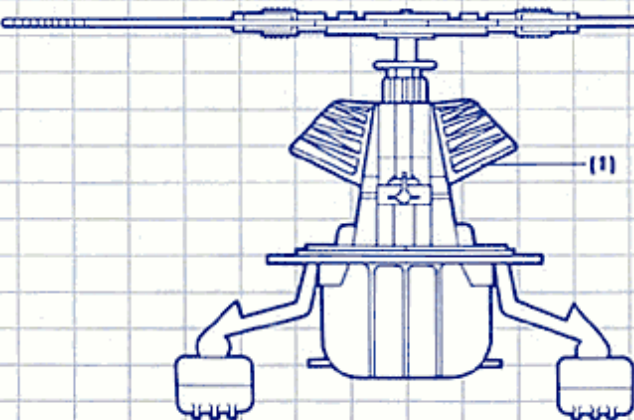



DREADNOK SWAMPFIRE

- 1) "BREATHERS" AIR INDUCTION ENGINE COVER
- 2) "SINKER" 25MM AUTO-LOAD REPEATING CANNON
- 3) "SWAMPSMOOTH" REINFORCED CARBON-MESH HULL
- 4) FLARED FRONT STABILIZING FINS
- 5) "PLANK" PILOT COMMAND SEAT
- 6) "RAZOR BLADE" RETRACTABLE BORON-FIBER ROTORS
- 7) HYDRAULIC-OPERATED GAS-DAMPENED PONTOON ARMS
- 8) ALUMINUM SUPER-SEALED GAS-FILLED PONTOONS
- 9) "JUNKED FLOOR" TOP-MOUNTED PERSONNEL PLATFORMS
- 10) TITANIUM-FINNED DIRECTIONAL ROTOR
- 11) HORIZONTAL AERO/HYDRO STABILIZING RUDDERS
- 12) OMNI-DIRECTIONAL CONTROL STICK

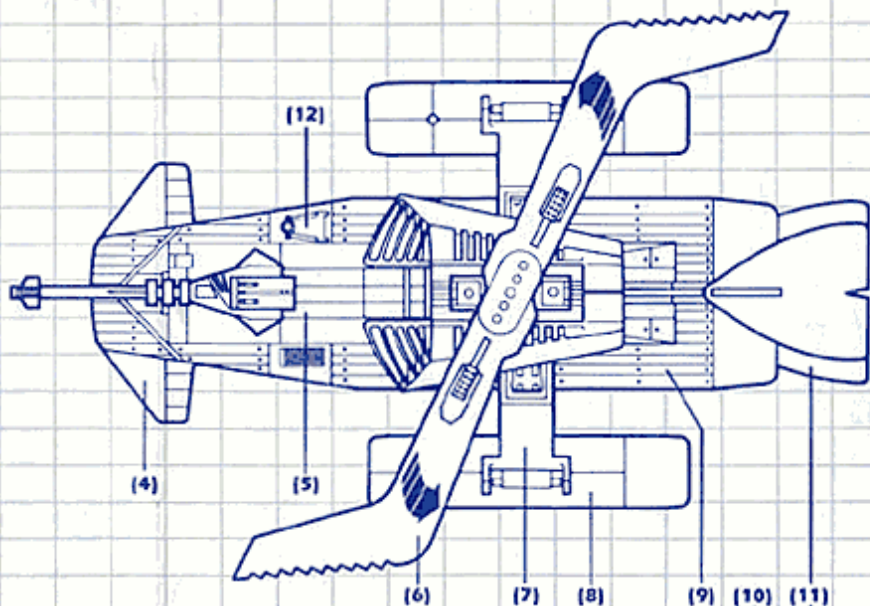

Remove all pieces from plastic frames. If you have difficulty, use safety scissors.

DREADNOK SWAMPFIRE INSTRUCTIONS

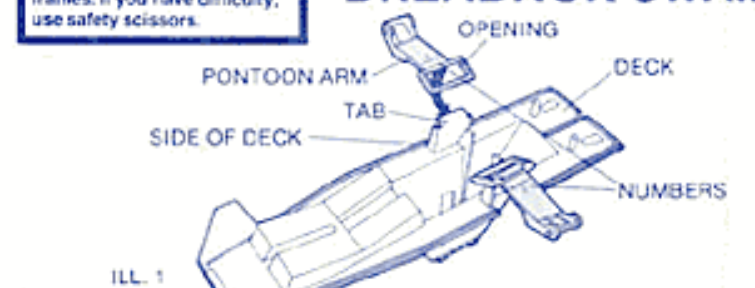


- 1 Turn deck upside down. With numbers facing you, place opening in pontoon arm over tab on side of deck. Snap bar into notch. Repeat with other pontoon arm. (ILL. 1)



- 3 Slide tail into slot in rear of boat until it snaps into place. Snap large post on tail rotor (with knob) into hole on right side of tail. (ILL. 3)



- 5 Snap tabs on left and right intakes (marked "L" and "R") into holes on each side of engine compartment. Insert post on gun into hole in front deck. (ILL. 5)

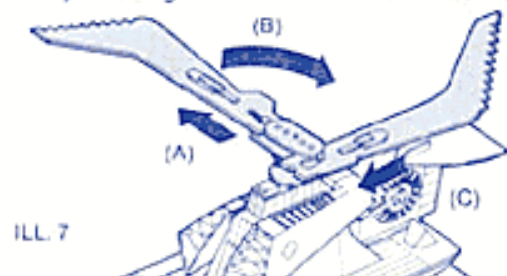


- 7 In HELICOPTER MODE: Slide blades out from under rotor head (A). Point both blades toward rear of boat (B) and snap into place (C).




- 9 Peel and apply labels as shown.




- 2 Place rib on front of deck over front of hull. Insert posts underneath deck into holes in hull. (ILL. 2)

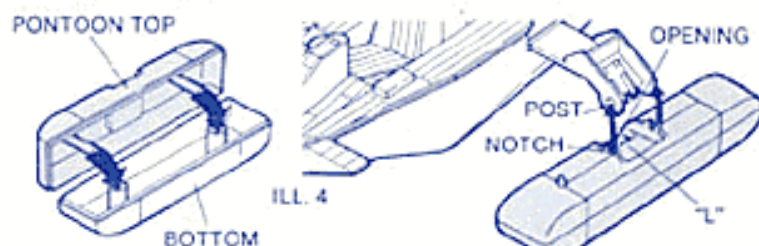

- 4 Insert posts in pontoon tops into holes in pontoon bottoms. Press firmly together. Snap posts on left pontoon arm into notches in left pontoon (marked "L"). Repeat with right pontoon (marked "R"). (ILL. 4)

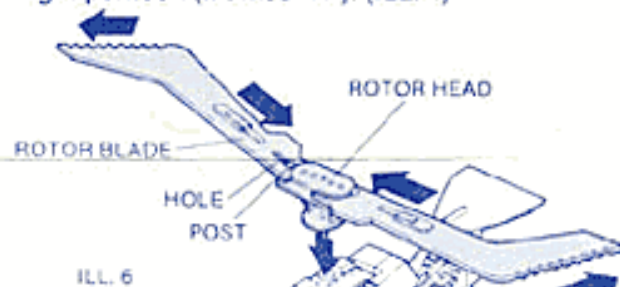

- 6 In HELICOPTER MODE: Insert rotor blade under rotor head and place hole over post. Slide blade toward rotor head and snap into place. Repeat with second rotor blade. (Note: Make sure blades face opposite directions.) Snap post on rotor into hole in engine compartment.

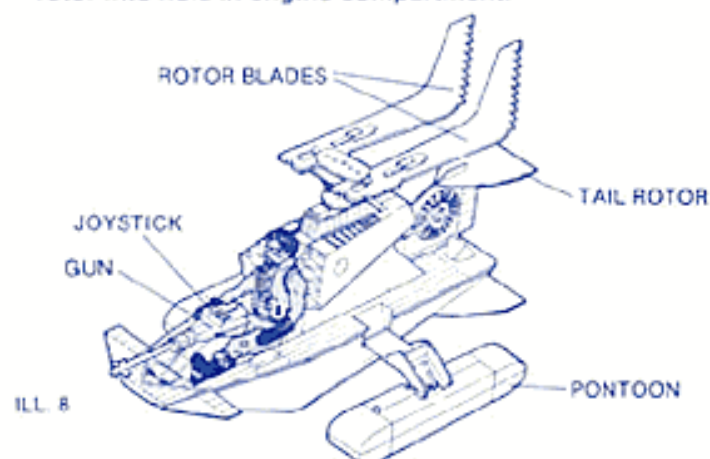

- 8 The master of camouflage and deception, the Swampfire changes color when exposed to sunlight! Pontons, gun, rotor blades, and tail rotor are all photochromic! Place a Dreadnok or Cobra figure (sold separately) in pilot's seat with hand on joystick and take him for a ride! (ILL. 8)