


Remove all pieces from plastic frames. If you have difficulty, use safety scissors.


COBRA SURVEILLANCE PORT



- 1 Identify Surveillance Port walls.

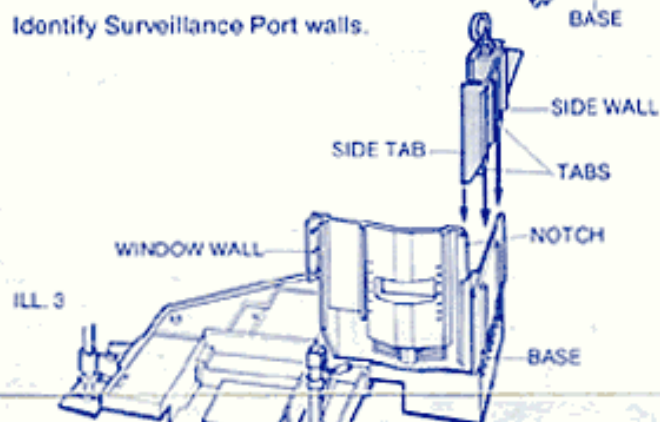


- 3 Slide side tab on side wall through notch on window wall as shown. Press bottom tabs on side wall over base wall.

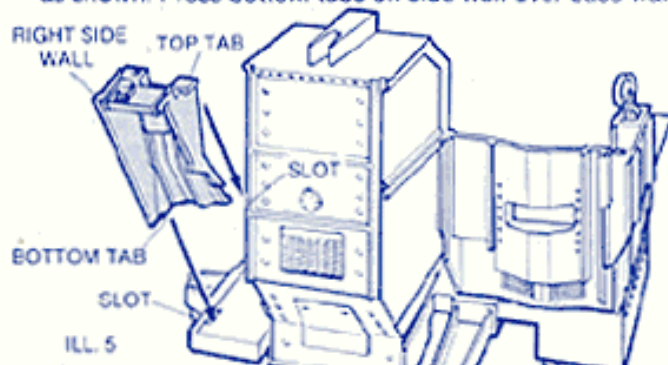


- 5 Insert tab on bottom of right side wall into slot in base. Slide top tab into slot in front wall.




- 7 Insert radar dish post into hole on top of large front wall. Insert antenna and rifle posts into holes in top wall. Insert machine gun post into hole in right side wall.

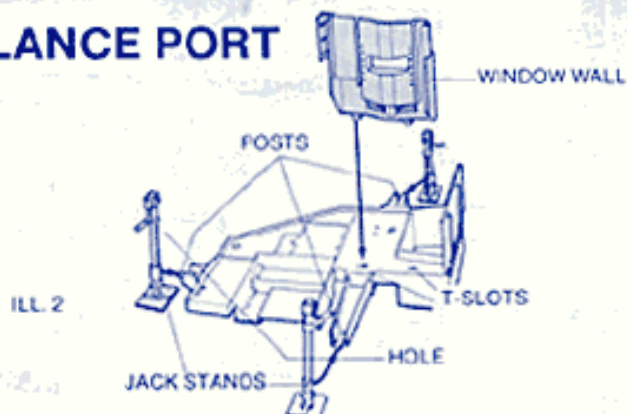

- 2 Fit holes in three jack stands over posts on each side of base. Insert T-tabs on window wall into T-slots in base.

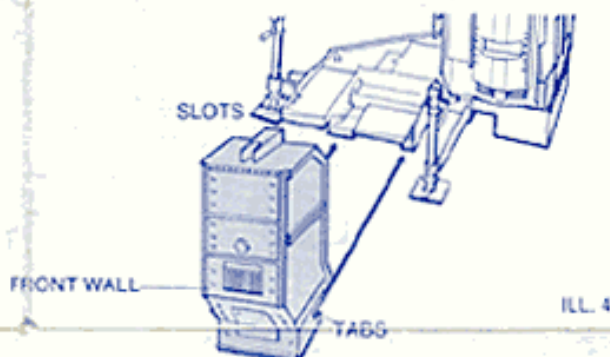

- 4 From front of base, slide two bottom tabs on front wall into 2 slots in front of base.

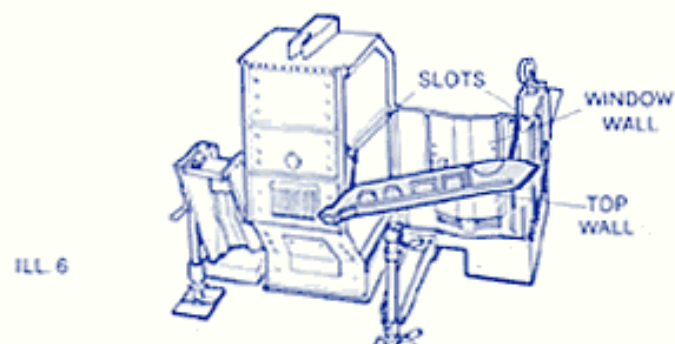

- 6 Place top wall over window wall on an angle as shown. Slide each end into slots in front and side walls.

- 8 Peel and apply labels as shown.

