

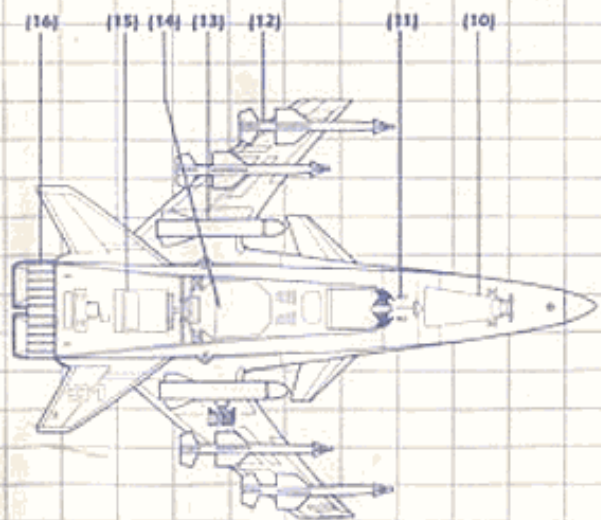
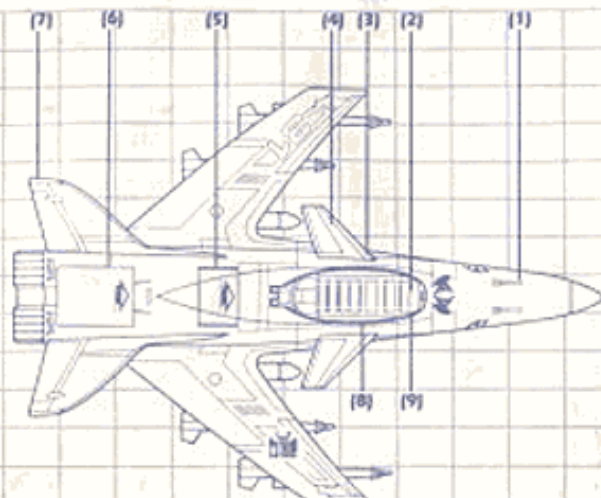


PYTHON CONQUEST™ X-30


- 1) TOP-MOUNTED "DOUBLE FANG" 25MM TWIN CANNONS
- 2) "FLARED HOOD" RECONDITIONED SNAKE SKIN PILOT SEAT
- 3) HORIZONTAL STABILIZING FRONT CANARDS
- 4) LAYERED EPOXY/HONEYCOMB CONSTRUCTION FORWARD-SWEPT WINGS
- 5) TRIPLE COMPUTER MICRO-ADJUST NAVIGATION SYSTEM
- 6) "LIFT-OFF" TWIN 26M LB. THRUST TUROFAN ENGINES
- 7) VERTICAL STABILIZERS/RUDDERS
- 8) TINTED REARWARD PIVOTING BLAST-PROOF CANOPY
- 9) "SNAKE EYE" HUD (HEAD UP DISPLAY) LASER GUIDANCE SYSTEM
- 10) TITANIUM ALLOY FORWARD LANDING GEAR
- 11) RE-ALIGNING "DESTROYER" THREAT WARNING SENSORS
- 12) AIM-12 RE-TIPPED "LIGHT SPARROW" AIR-TO-AIR MISSILES
- 13) MK. 3 "SPIKE" IRGB DROP TANK
- 14) REAR ALLOY DUAL WHEEL LANDING GEAR
- 15) ELECTRO-OPTIC REAR-MOUNTED SENSORS
- 16) JET EXHAUST DISCHARGE VENTILATORS

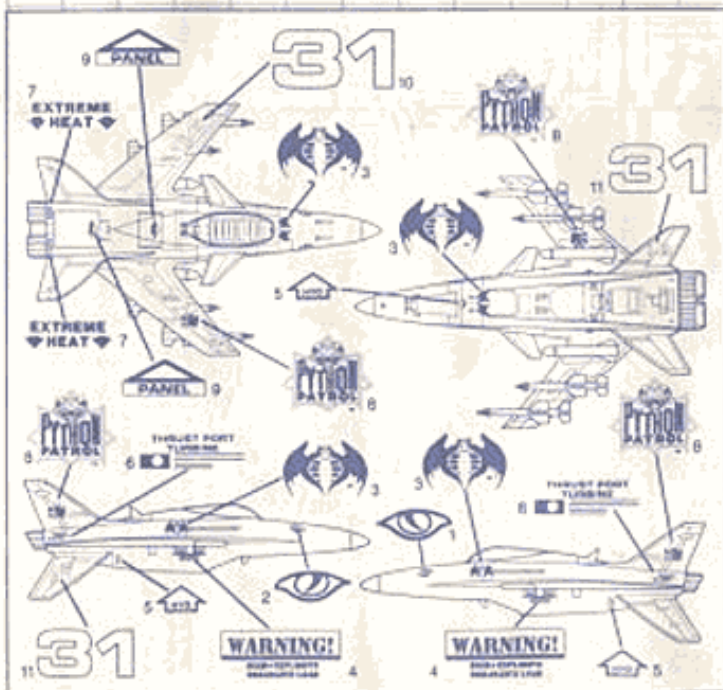

LARGE TIRE ASSEMBLY

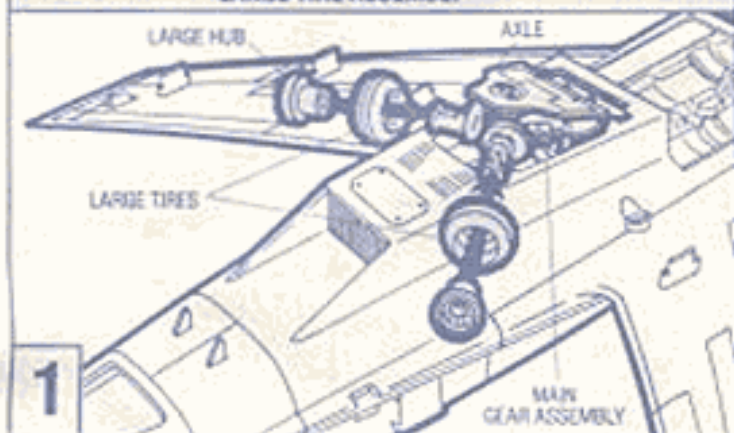

SMALL TIRE ASSEMBLY

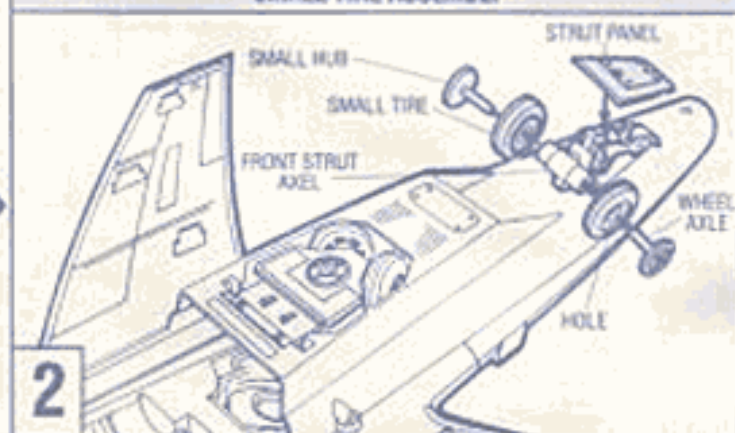

TANKS/MISSILES INSTALLATION




ENGINE COVER/HATCH INSTALLATION



FIN IMPLEMENTATION



CANOPY/NOSE INSTALLATION

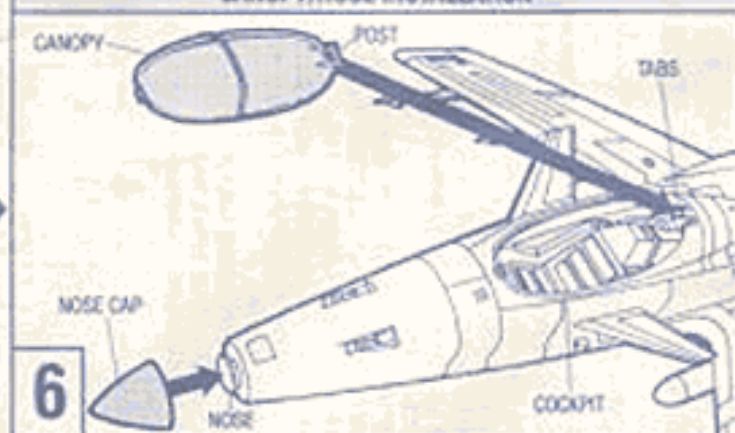

- 1 Insert large hubs into large tires. Turn jet upside down and lift main gear assembly. Snap hubs over axles on main gear assembly. (ILL. 1)
- 2 Insert small hubs into small tires. Lift front strut. Push hubs into holes in strut axle. With wide end nearest wheels, snap holes in strut panel over tabs on strut. Push front and rear landing gear down. (ILL. 2)
- 3 Insert two rear tabs on bottom tail under tail nozzles. Fit drop tank caps onto drop tanks. Fit slots in two drop tanks over tabs closest to fuselage. Fit slots in four missiles over tabs on outer wings. (ILL. 3)
- 4 Turn jet right side up. Insert two front tabs on engine cover into engine compartment. Push two rear tabs into place. Insert two rear tabs on hydraulic hatch into hatch opening. Push front tab into place. (ILL. 4)
- 5 Insert tabs on left and right wings (marked "L" and "R") into slots on sides of fuselage. Press ribs on left and right tail fins (marked "L" and "R") into slots in rear of jet. (ILL. 5)
- 6 Snap post on canopy between tabs in back of cockpit. Snap nose cap over nose of jet. (ILL. 6)