
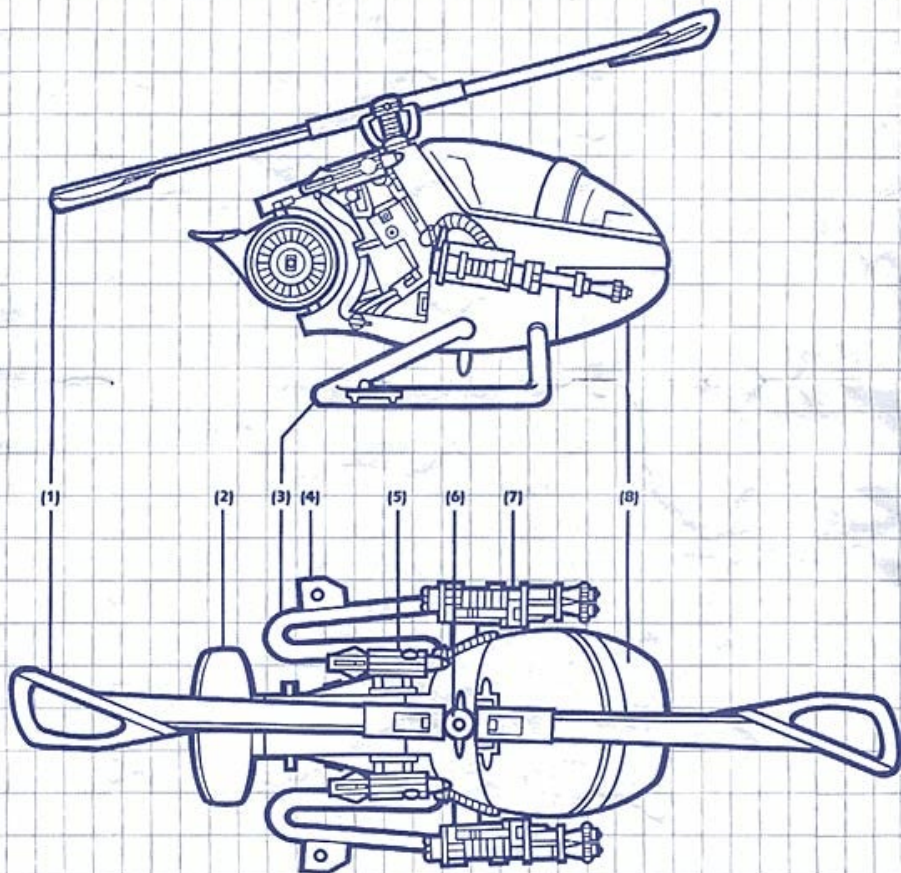



G.I. JOE® LOCUST™

- 1) AERODYNAMIC, HIGH-TECH PROPELLOR BLADES
- 2) REAR STABILIZER FOR MAINTAINING PROPER IN-FLIGHT BALANCE
- 3) TITANIUM SUPPORTED, DAMAGE RESISTANT LANDING SKIDS
- 4) PERSONNEL TRANSPORTATION SECURITY PLATFORMS
- 5) HEAT-SEEKING, LOW-NOISE, AIR-TO-AIR MISSILE
- 6) PROPELLOR ACTIVATION REGULATOR
- 7) DUAL, SIDE-MOUNTED, ARMOR-SHATTERING MACHINE GUN
- 8) BLAST-PROOF, PLEXIFORM, TRANSPARENT WINDSCREEN CANOPY

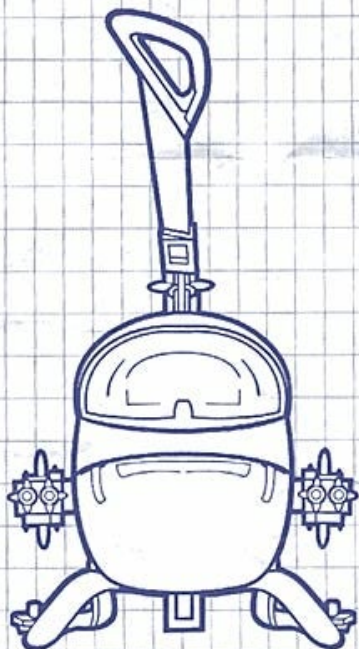


Contains: Right & left fuselage, bomb bay door, lower canopy, upper canopy, tail housing, right & left tail halves, seat, landing skid, large propellor, two side guns, four bombs/missiles, figure retaining clip, G.I. Joe folder, label sheet, Instructions and blueprint.

FUSELAGE ASSEMBLY

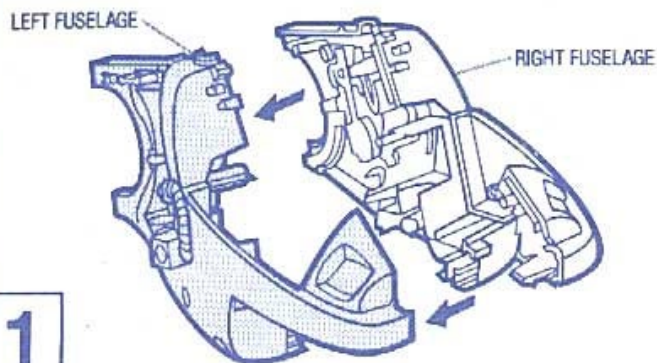


1

COCKPIT SEAT INSTALLATION

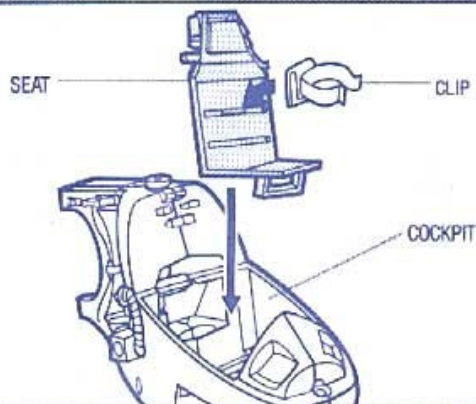


2

LANDING SKID INSTALLATION

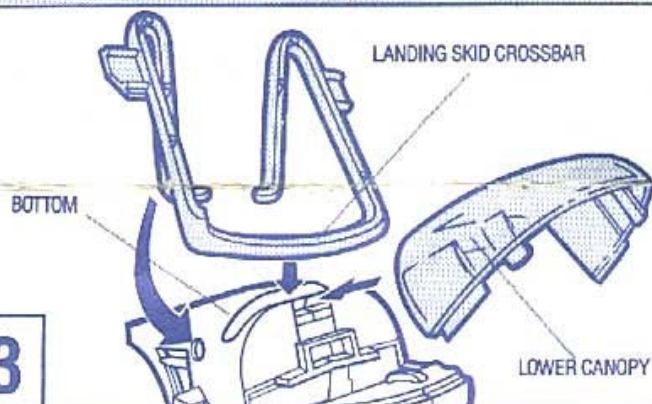


3

PROPELLOR ASSEMBLY

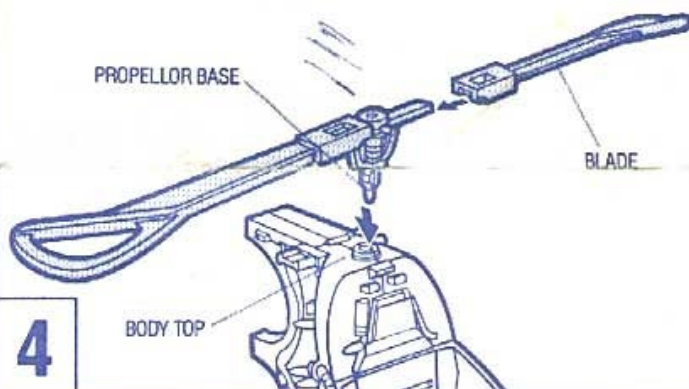


4

UPPER CANOPY INSTALLATION

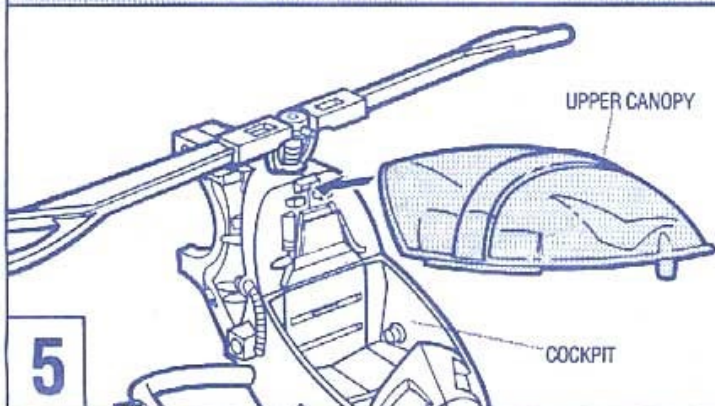

5


TAIL HOUSING ASSEMBLY

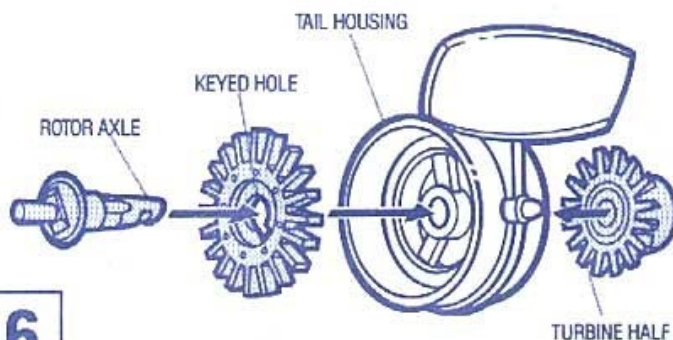

6


- 1 Snap right and left fuselage halves together. (ILL. 1)
- 2 Fit seat clip into slot in seat, then place seat into cockpit as shown. Fit hole attachment section on seat bottom over tab on cockpit bottom, then snap seat top into cockpit rear. (ILL. 2)
- 3 Turn body upside down. Fit landing skid crossbar in groove on body as shown. Swing landing skid downward and snap side posts into holes in body as shown. While locking rear tab in first, snap lower canopy onto body front end. (ILL. 3)
- 4 Turn body right side up. Snap propellor base into hole in body top. Slide propellor blades onto base tabs. (ILL. 4)
- 5 Snap upper canopy over cockpit as shown. (ILL. 5)
- 6 Fit rotor axle into keyed hole in rear turbine half as shown. Fit turbine half into left side of tail housing, then snap other turbine half over rotor axle as shown. (ILL. 6)

TURBINE HOUSING INSTALLATION

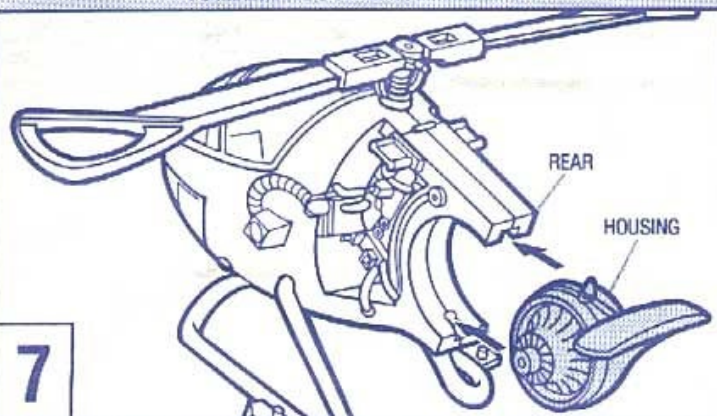


7

BOMB BAY AREA INSTALLATION/OPERATION

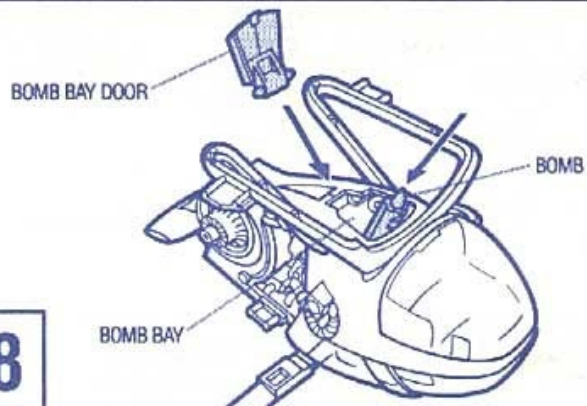

8

GUNS/BOMBS INSTALLATION

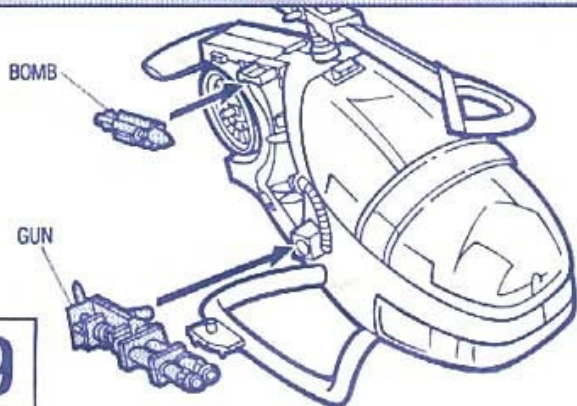

9

- 7 Fit top post on tail housing into hole in upper body rear, then slide in and snap bottom tail housing post into slot in lower body rear as shown. (ILL. 7)
- 8 Turn body upside down. Snap one side post on bomb bay door into hole in bomb bay, then swing down other side post and snap onto other hole as shown. To open bomb bay door, lift tab on door rear. Slide bombs into bomb bay area as shown. To release bombs, lift door. (ILL. 8)
- 9 Snap guns into holes in body sides. Fit bombs over tabs on body top. (ILL. 9)

©1989 Hasbro, Inc., Pawtucket, RI 02862 U.S.A. All Rights Reserved. **MADE IN U.S.A.** 6388 P/N 40721500

Peel and apply labels as shown.

